

REWARD

User Handbook

 **Nightingale**



4800 Series

nightingalechairs.com

User Guide Adjustments



A ARMS

Fixed loop arms



B TILT LOCK

To lock in upright position,
push lever in towards seat.
To unlock, pull lever out



C TENSION KNOB

Turn knob clockwise to increase tension,
turn counter-clockwise to decrease tension.



D PNEUMATIC HEIGHT ADJUSTMENT

To lower, turn the lever while seated. To raise, turn lever with your weight off the seat.



Nightingale Corp.
T 1.800.363.8954
F 1.800.637.6784
www.nightingalechairs.com
info@nightingalechairs.com