

CXO

User Handbook

 **Nightingale**



6200 Series

[Nightingalechairs.com](https://www.nightingalechairs.com)

Congratulations, this CXO™ is yours.

Please read and understand the user
adjustment guide before operating the chair.



6200-CH



6200D-HD-CH



HD Arm

Press & hold button to adjust height
of arm rest as desired, release to
lock in place.

Using & Adjusting Your CXO™



A

Tension Adjustment

Turn right hand knob clockwise to increase tension, turn the same knob counter-clockwise to decrease tension.



B

Seat Height Adjustment

to lower, lift the lever up while seated. To raise seat lift the same lever up with no weight on Seat



C

Seat Slider

Lift lever up to unlock, move seat to desired position while seated and release to lock.



D

Multi-Position Tilt Lock

To lock in position, turn the knob clockwise. To unlock and activate the positive back release, turn the knob counter-clockwise and lean back.



E

Arm Height & Width Adjustment

To raise or lower arm height, lift trigger and slide into desired position. To adjust the width, pull out to widen; push in to contract width.



F

Pivot & Arm Pad Adjustment

To pivot, press/hold front-button to adjust angle, and release to lock. To adjust slider, press/hold back-button and slide to desired front/back position, and release to lock.



G

Height and Angle Adjustable Headrest

Simply lift or lower headrest to desired position—locks automatically. Headrest can be tilted to desired angle.



H

Lumbar Adjustment

To adjust depth of lumbar, push in to increase. To release, press and hold the top reset button and gently pull away from chair. To raise lumbar position, lift lumbar to desired height and release. To reset height, lift to top.

Mechanism

Once a year, lubricate using light sewing machine oil or similar product. (Spray with plastic straw attached to sprayer). NOTE: To prevent dripping, avoid over lubrication which may cause damage to surrounding surfaces.

ABLEX™ Mesh

Clean with mild detergent and water applied with a clean damp cloth or sponge. Rinse with a damp (water) cloth and let dry. Never use hot water and avoid scrubbing. Use gentle movements.

Plastic Parts

To clean, spray with a mild detergent and wipe off using a damp (water) cloth. Do not use abrasives or excessive amounts of cleaner.

Frame

Powder coat frames can be cleaned by wiping with a damp cloth and any mild detergent.

*The instruction for the care and maintenance of Nightingale Products are provided to you as a service. No warranty is implied since results may vary.

FOR MORE INFORMATION, PLEASE VISIT

Nightingalechairs.com