

VERONNA

User Handbook



7000 Series

nightingalechairs.com

Congratulations,

this VERONNATM is yours.

Please read and understand this user handbook before operating this office chair.



Using & Adjusting Your VERONNA™



Pneumatic Height Adjustment

To lower height, pull lever up while seated. To raise seat height, pull lever up with weight off the chair.



Tension Knob

Turn clockwise to increase tension, turn counter-clockwise to decrease tension.



Lumbar Adjustment

To raise lumbar support, simultaneously pull up levers on each side of back lumbar adjustment.
To lower Lumbar support, simultaneously push down both sides of the Lumbar support levers.



Infinite Position Tilt Lock

To lock tilt in position, turn knob backwards. To unlock chair, turn knob forward and lean back to release the lock.



Arm Height Adjustment

To raise or lower arm height push button up and move arm to desired position.

Release to lock.



Arm Pad Width Adjustment

To increase or decrease arm pad width adjustment, push arm pad to desired position.



Arm Pad Front to Back Adjustment

Push arm pad forward or pull backward to desired position for increased or decreased arm support.



Arm Pad Pivot Adjustment Turn arm pads inward to desired

Turn arm pads inward to desire position for increased arm support.



Seat Slide Adjustment

To slide seat forward, lock tilt (D) in upright position. Push button in to activate seat slide and slide the seat forward to desired position, release button to lock. To return seat to original position, push button in and remove weight from chair. Release button when seat is moved back to desired position.

Care Instructions

With regular care and maintenance, your Veronna™ will provide many years of superior performance and satisfaction. To maintain the quality of your Nightingale chair, please follow the cleaning instructions outlined here.

Mechanism

Once a year, lubricate using light sewing machine oil or similar product. (Spray with plastic straw attached to sprayer). NOTE: To prevent dripping, avoid over lubrication which may cause damage to surrounding surfaces.

Plastic Parts

To clean, spray with a mild detergent and wipe off using a damp (water) cloth. Do not use abrasives or excessive amounts of cleaner.

Frame

Chrome frames can be cleaned by wiping with a damp cloth and any mild detergent.

Fabric

Clean with mild detergent and water applied with a damp clean cloth or sponge. Rinse with water. Never use hot water and avoid scrubbing.

Use gentle movements.

FOR MORE INFORMATION, PLEASE VISIT

www.nightingalechairs.com











^{*}The instruction for the care and maintenance of Nightingale Products are provided to you as a sevice. No warranty is implied since results may vary.