

IC2

User Handbook

 **Nightingale**



7300 Series

nightingalechairs.com

Congratulations, this IC2[®] is yours.

Please read and understand this user handbook
before operating this office chair.



7300



7300D-WH-UFST



7300D-WH-UF



7300D-WH



7300-INT-UF

Using the Features On Your IC2®



A

Pneumatic Height Adjustment

To lower, pull lever up while seated.
To raise, pull lever up with no weight on the seat.



B

Seat Slider

Lift levers up on both sides to unlock.
While holding both levers, move seat to desired position and release to lock.



C

Infinite Tilt Lock

To lock chair in desired position or free movement, pull lever up and release.



D

Tension Knob

Turn clockwise to increase tension, turn counter-clockwise to release tension.



E

Arm Height & Width Adjustment

To raise or lower arm height, lift trigger and slide up/down. To adjust width, turn knob on the underside of either arm clockwise and adjust width. To tighten in position, turn the knob counter-clockwise.



F

Arm Pivot (i) & Arm Pad Adjustment (ii)


To pivot, press/hold front button to position in/outwards, and release to lock. To adjust arm pad slider, press/hold back button and slide into position, and release to lock.



G

Ergonomic Adjustable Headrest

Simply lift or lower headrest to desired position—locks automatically. Headrest can be tilted to desired angle. (Only available with optional headrest, -INT option is not adjustable)

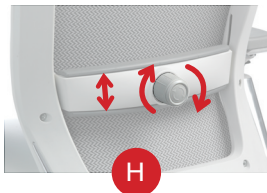

H

Lumbar Adjustment

To adjust depth of lumbar, turn clockwise to increase and counter-clockwise to decrease depth. To adjust height position, lift or lower lumbar to appropriate height and release—locks automatically.

Care Instructions

With regular care and maintenance, your IC2® will provide many years of superior performance and satisfaction. To maintain the quality of your Nightingale product, please follow the cleaning instructions outlined here.

Mechanism

Once a year, lubricate using light sewing machine oil or similar product. (Spray with plastic straw attached to sprayer). NOTE: To prevent dripping, avoid over lubrication which may cause damage to surrounding surfaces.

NEBULA™ Mesh

Clean with mild detergent and water applied with a clean damp cloth or sponge. Rinse with a damp (water) cloth and let dry. Never use hot water and avoid scrubbing. Use gentle movements.

Plastic Parts

To clean, spray with a mild detergent and wipe off using a damp (water) cloth. Do not use abrasives or excessive amounts of cleaner.

Frame

Powder coat frames can be cleaned by wiping with a damp cloth and any mild detergent.

*The instruction for the care and maintenance of Nightingale Products are provided to you as a service. No warranty is implied since results may vary.

FOR MORE INFORMATION, PLEASE VISIT

www.nightingalechairs.com



Nightingale Corp.

T 1.800.363.8954

F 1.800.637.6784

www.nightingalechairs.com

info@nightingalechairs.com



RECYCLABLE